



# ES1-PRO

## Programmer for Infrared thermosensor

### UK/USA INSTRUCTION MANUAL

### D Bedienungsanleitung

### F Manuel de d'instructions

Thank you for purchasing this OMRON product.  
This manual primarily describes precautions required in installing and operating the programmer.  
Before operating the product, read this manual thoroughly to acquire sufficient knowledge of the product.  
Keep this manual for future reference.


Herzlichen Glückwunsch zum Kauf dieses OMRON-Produkts.  
Diese Anleitung beschreibt in erster Linie Vorsichtsmaßregeln, die bei Installation und Betrieb des Programmierteils beachtet werden müssen.  
Vor dem Gebrauch des Produktes lesen Sie bitte diese Anleitung gründlich durch, um ausreichende Kenntnis des Produkts zu erwerben.  
Bewahren Sie diese Anleitung zur späteren Bezugnahme griffbereit auf.

Nous vous remercions pour avoir choisi ce produit OMRON.  
Ce manuel décrit essentiellement les précautions nécessaires à l'installation et à l'utilisation du programmeur.  
Avant d'utiliser le produit, lisez attentivement ce manuel afin de bien connaître le produit.  
Conservez ce manuel pour pouvoir vous y reporter par la suite.

## OMRON Corporation

© All Rights Reserved

I0041871000D

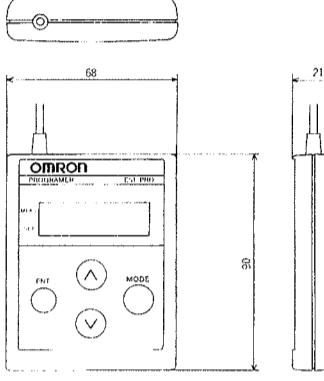

(mm)

Power source of the programmer is supplied from the thermosensor. When using the programmer, open the rubber cap on the rear of the body and then insert the plug into the jack.  
When power is ON, display indicates "..." and then turns to process value (PV) display mode.

• Operation key There are 5 modes as shown below and they can be selected by the mode key.

Please see the table below for the default and the setting range.

PV display mode: Displays the PV.

Emissivity ε setting mode: Sets the emissivity ε.

Maximum output setting mode: Sets the temperature for 20 mA (upper limit).

Minimum output setting mode: Sets the temperature for 4 mA (lower limit).

Moving average data setting mode: Sets the data for calculating moving average.

	Thermosensor	Default	Setting range	Resolution
Emissivity	All	0.95	0.10 to 1.99	0.01
Max. output (20 mA)	ES1-LW50H,ES1-LW100H	1000(°C)	0 to 1000	10
	Except for the above	500(°C)	-50 to 500	
Min. output (4 mA)	ES1-LW50H,ES1-LW100H	0(°C)	0 to 1000	10
	Except for the above	0(°C)	-50 to 500	
Moving average data	All	1	1 to 25	1


\*\*Emissivity ε : Generally, emissivity is 1.00 max., but it can be set up to 1.99 by this programmer considering corrections for the influence from external disturbance and etc.

- SETTING METHOD
  1. Select the setting mode by mode key.
  2. Change the set value (SV) by set value (SV) change key.
  3. Fix the SV by ENT key. When fixing the SV, indication other than SV indication flashes.


Note: SV does not change unless ENT key is pressed after the SV change.

## CURRENT OUTPUT TEST FUNCTION

When connected to a recorder or similar, zero span adjustment is enabled by selecting the current output test mode.

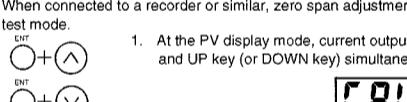

At the current output test mode (described 'test mode' hereafter), the thermosensor outputs 20 mA by pressing the UP key and 4 mA by pressing the DOWN key. Then the LCD display indicates as shown below.

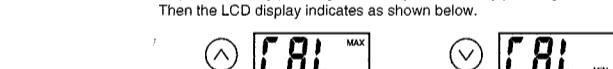

2. The mode returns to the PV mode by pressing ENT key or MODE key. If the plug is disconnected by mistake during test mode execution, the thermosensor stays in the test mode. The thermosensor returns to the PV mode by turning off the power and on again.

## UK/USA Specifications

Functions	Indication of PV and SV, Set value change (Emissivity ε, max. output, min. output and moving average data) Current output test (0 output and FS output) Error message (Error indication, numeric value flashing, 'OVER' flashing and 'C' flashing)
Connection to the thermosensor	3 pole mini plug, Cable length: 2 m
Indication renewal	2 times in the unit of one second
Current consumption	5 mA max.
Ambient temperature range	0 to 55°C
Storage temperature range	-20 to 55°C
Indication temperature rang	ES1-LW50H,ES1-LW100H : -70 to 1050°C ES1-LP3,ES1-LP10,ES1-LW50,ES1-LW100 : -70 to 550°C
Weight	Approx. 100g

## UK/USA Troubleshooting

Display	Cause	Remedy
Er0, Er1, Er2	Cannot communicate with the thermosensor. ●Incorrect connection of the plug. ●Unsatisfactory supply voltage to the thermosensor. ●The thermosensor or programmer is defective.	→ Correct the connection. → Apply 12 to 24 V DC power supply. → Repair is required.
Er3, Er4	Backup SV (Emissivity ε, max. output, min. output and moving average data) of the thermosensor is abnormal.	→ Reset the SV by the programmer. When these errors are not solved after turning the power off and on again, the thermosensor needs to be repaired.
Er6, Er7	Measurement is disabled due to the defective circuit of thermosensor.	→ Thermosensor needs to be repaired.
Er9	Calibration data stored in non-volatile memory is abnormal.	→ Thermosensor needs to be repaired.
Flashing of 'OVER'	PV is not in the indication temperature range.	
Flashing of the 'C'	PV is not in the measured temperature range.	
Flashing of 'C'	Ambient temperature of the sensor is not in the operating temperature range.	
**measured temperature range :	ES1-LP3,ES1-LP10 : 0 to 500°C ES1-LW50,ES1-LW100 : -50 to 500°C ES1-LW50H,ES1-LW100H : 0 to 1000°C	

## UK/USA Contact address

OMRON ELECTRONICS INC.  
Phone: 1-847-843-7900

OMRON CANADA INC.  
Phone : 416-286-6465  
Phone : 514-636-6676 (French Language)

UK/USA NOTICE	D HINWEIS	F NOTE
1) Never use organic solvents to clean the programmer. Use standard grade alcohol to clean the case. 2) Do not disconnect the plug at power ON. Insert or pull out the plug after power OFF. 3) Do not permanently connect the Infrared thermosensor to the programmer. Connect the Infrared thermosensor to the programmer only when it's used.	1) Niemals flüchtige organische Lösungsmittel zur Reinigung des Programmerteils verwenden. Immer Standard-Alkohol zum Reinigen des Gehäuses nehmen. 2) Nicht den Stecker in eingeschalteter Zustand abziehen. Immer nach dem Ausschalten einsetzen oder abziehen. 3) Nicht permanent den Infrarot-Thermosensor an das Programmerteil anschließen. Den Infrarot-Thermosensor nur bei Verwendung an das Programmerteil anschließen.	1) N'utilisez jamais de solvants organiques pour nettoyer le programmeur. Nettoyez le boîtier à l'alcool. 2) Ne déconnectez pas la prise lorsque le programmeur est sous tension. Insérez ou retirez la prise après avoir mis hors tension. 3) Ne connectez pas en permanence le thermosensor infrarouge au programmeur, mais seulement lorsque vous l'utilisez.
UK/USA Names and Functions	D Bezeichnungen und Funktionen	F Noms et fonctions
<b>Display</b> Process value display mode  <b>MEAS SET</b> Parameter setting <b>Operation key</b>  <b>ENT key:</b> Fixes the set value. <b>Set value (SV) change key (UP key):</b> Increases the value. <b>Set value (SV) change key (DOWN key):</b> Decreases the value.	<b>Display</b> Prozeßwert-Anzeigemodus  <b>MEAS SET</b> Parameter-Einstellung <b>Betriebstaste</b>  <b>ENT-Taste:</b> Stellt den eingegebenen Wert fest ein. <b>Einstellwert (SV) Änderungstaste (UP-Taste):</b> Stellt den Wert höher ein. <b>Einstellwert (SV) Änderungstaste (DOWN-Taste):</b> Stellt den Wert niedriger ein.	<b>Affichage</b> Mode d'affichage de la valeur du processus  <b>MEAS SET</b> définition des paramètres <b>Touche de fonctionnement</b>  <b>Touche ENT:</b> Confirme la valeur définie. <b>Touche de changement (touche UP) de la valeur définie (SV):</b> Augmente la valeur. <b>Touche de changement (touche DOWN) de la valeur définie (SV):</b> Diminue la valeur.
UK/USA Emissivity	D Emissivität	F Emissivité
To measure the real temperature, emissivity appropriate for the object to be measured should be set. When emissivity of the object to be measured is unknown. There are some methods to determine it as shown below.	Zum Messen der echten Temperatur muß die Emissivität, die für das Meßobjekt geeignet ist, eingestellt werden. Wenn die Emissivität des zu messenden Objekts unbekannt ist, gibt es Methoden zur Bestimmung wie unten gezeigt.	Pour mesurer la température réelle, définissez l'émissivité appropriée à l'objet à mesurer. Lorsque vous ne connaissez pas l'émissivité de l'objet à mesurer, les méthodes ci-dessous vous permettent de la déterminer.
a) Determine the emissivity of the object by referring to a material characteristic list, electrothermics data/documents. ※The emissivity differs according to the surface condition and measuring wavelength range(8 to 16 μm). b) Raise the temperature of the object to a known temperature in a constant temperature oven. Set the emissivity ε of the programmer so that the temperature of the object coincides to the indicated temperature of the programmer. Then use this emissivity as that of the object. c) Measure the temperature near the surface of the object by using thermometer or thermocouple thermometer. Set the emissivity so that the PV of the programmer coincides to the temperature near the surface of the object. Then use this emissivity as that of the object. d) Coat the object with the paint, lacquer (gloss) whose emissivity is nearly close to 1 or stick masking tape for painting to the object. Then, measure the temperature in accordance with each of these emissivity. ※When the temperature is very high, heat resisting paint over the temperature that uses should be used.	a) Bestimmen Sie die Emissivität des Objekts unter Bezug auf eine Materialeigenschafts-Liste als elektrothermische Daten/Dokumente. ※Die Emissivität unterscheidet sich entsprechend dem Oberflächenzustand und dem Wellenlängenbereich (8 bis 16 μm). b) Heben Sie die Temperatur des Objekts auf eine bekannte Temperatur in einer konstanten Temperaturumgebung an. Stellen Sie die Emissivität ε des Programmierteils so ein, daß die Temperatur des Objekts mit der angezeigten Temperatur des Programmierteils übereinstimmt. Dann nehmen Sie diese Emissivität als die des Objekts. c) Messen Sie die Temperatur in der Nähe der Oberfläche unter Verwendung eines Thermometers, Thermokoppler-Thermometer. Stellen Sie die Emissivität so ein, daß der Prozeßwert (PV) des Programmierteils mit der Temperatur in der Nähe der Oberfläche des Objekts übereinstimmt. Dann nehmen Sie diese Emissivität als die des Objekts. d) Beschichten Sie das Objekt mit Farbe, Lack (glänzend) dessen Emissivität fast bei 1 liegt oder kleben Sie Deckband zum Malen auf das Objekt. Messen Sie dann die Temperatur entsprechend jeder dieser Emissivitäten. ※Wenn die Temperatur sehr hoch ist, soll hitzebeständige Farbe verwendet werden.	a) Déterminez l'émissivité de l'objet en vous reportant à la liste des caractéristiques des matériaux, aux données/documents d'électrothermie. ※L'émissivité dépend de l'état de la surface et de la plage de longueur d'onde de l'objet à mesurer (de 8 à 16 μm). b) Augmentez la température de l'objet jusqu'à une température constante égale et connue. Définissez l'émissivité à l'aide du programmeur de sorte que la température de l'objet coïncide avec la température indiquée par le programmeur. Utilisez alors cette émissivité pour l'objet. c) Mesurez la température près de la surface de l'objet avec un thermomètre ou un thermocouple. Définissez l'émissivité de sorte que la valeur du processus (PV) indiquée par le programmeur coïncide avec la température relevée près de la surface de l'objet. Utilisez alors cette émissivité pour l'objet. d) Recouvrez l'objet d'une peinture, d'une laque (gloss) dont l'émissivité s'approche de 1 ou collez un ruban de protection contre la peinture sur l'objet. Mesurez alors la température suivant chaque émissivité. ※Lorsque la température est très élevée, utilisez une peinture résistant à cette température.
Note:In case of b) and c), the temperature of the object should be at least 100°C.	Hinweis: Bei b) und c) soll die Temperatur des Objekts mindestens 100°C betragen.	Remarque: dans le cas de b) et de c), la température de l'objet doit être d'au moins 100°C.

## UK/USA Setting

Power source of the programmer is supplied from the thermosensor. When using the programmer, open the rubber cap on the rear of the body and then insert the plug into the jack.  
When power is ON, display indicates "..." and then turns to process value (PV) display mode.

• Operation key There are 5 modes as shown below and they can be selected by the mode key.

Please see the table below for the default and the setting range.

PV display mode: Displays the PV.

Emissivity ε setting mode: Sets the emissivity ε.

Maximum output setting mode: Sets the temperature for 20 mA (upper limit).

Minimum output setting mode: Sets the temperature for 4 mA (lower limit).

Moving average data setting mode: Sets the data for calculating moving average.


	Thermosensor	Default	Setting range	Resolution
Emissivity	All	0.95	0.10 to 1.99	0.01
Max. output (20 mA)	ES1-LW50H,ES1-LW100H	1000(°C)	0 to 1000	10
	Except for the above	500(°C)	-50 to 500	
Min. output (4 mA)	ES1-LW50H,ES1-LW100H	0(°C)	0 to 1000	10
	Except for the above	0(°C)	-50 to 500	
Moving average data	All	1	1 to 25	1

\*\*Emissivity ε : Generally, emissivity is 1.00 max., but it can be set up to 1.99 by this programmer considering corrections for the influence from external disturbance and etc.

- SETTING METHOD
  1. Select the setting mode by mode key.
  2. Change the set value (SV) by set value (SV) change key.
  3. Fix the SV by ENT key. When fixing the SV, indication other than SV indication flashes.

Note: SV does not change unless ENT key is pressed after the SV change.

When connected to a recorder or similar, zero span adjustment is enabled by selecting the current output test mode.

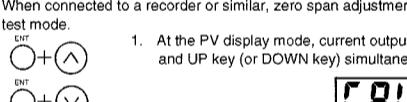

At the current output test mode (described 'test mode' hereafter), the thermosensor outputs 20 mA by pressing the UP key