

MITSUBISHI

A1S64TCTT-S1 Temperature Control Module A1S64TCTTBW-S1 Temperature Control Module with Disconnection Detection Function

Mitsubishi General-Purpose Programmable Controller

User's Manual

(Hardware)

Thank you for purchasing the Mitsubishi general-purpose programmable controller MELSEC-A series.

Prior to use, please read this manual thoroughly and familiarize yourself with the product.



Type	A1S64TCS1-U-E-H/W
Type Code	13J890
IB(NA)-66746-E(0609)MEE	

© 1996 MITSUBISHI ELECTRIC CORPORATION

● SAFETY PRECAUTIONS ●

(Please read these precautions prior to use.)

When using Mitsubishi equipment, thoroughly read this manual and the associated manuals introduced in this manual. Also, pay careful attention to safety and handle the module properly.

These precautions apply only to Mitsubishi equipment. Refer to the CPU module user's manual for a description of the PC system safety precautions.

These ●SAFETY PRECAUTIONS● classify the safety precautions into two categories: "DANGER" and "CAUTION".

⚠ DANGER Procedures which may lead to a dangerous condition and cause death or serious injury if not carried out properly.

⚠ CAUTION Procedures which may lead to a dangerous condition and cause superficial to medium injury, or physical damage only, if not carried out properly.

Depending on circumstances, procedures indicated by **⚠ CAUTION** may also be linked to serious results.

In any case, it is important to follow the directions for usage.

Store this manual in a safe place so that you can take it out and read it whenever necessary. Always forward it to the end user.

[Design precautions]

⚠ DANGER

- Configure a safety circuit external to the PC, so that the entire system operates safely even if there is an external power error or if the PC is malfunctioning.

[Design precautions]

⚠ CAUTION

- Do not bundle, or near the control cables and communication cables with the main circuit and power cables. Keep them at least 100mm (3.94inch) away from such cables. Noise may cause erroneous operation.

[Installation precautions]

⚠ CAUTION

- Use the PC in the environment given in the general specifications of the this manual. Using the PC outside the range of the general specifications may result in electric shock, fire or malfunctioning, or may damage or degrade the module.
- Insert the tabs at the bottom of the module into the mounting holes in the base module before installing the module, and after tightening the module fixing screws with specified torque. If the connector is not properly installed and tightened, it may result in malfunctioning, failure or cause the module to fall out. Tightening the screws too far may cause damage to the screw and/or the module, resulting in fall out, short circuit or malfunctions.
- Do not directly touch the module's conductive parts or electronic components. Doing so could cause malfunction or failure in the module.
- Insert the wire breakage detection connector installation screw into the mounting holes in the module, and after tightening the connector installation screw with specified torque. If the connector is not properly installed and tightened, it may result in malfunction, failure, or fall out.

[Wiring precautions]

⚠ CAUTION

- Be sure to ground the shield wire with a special PC ground of Type III or above. Not doing so could result in malfunction.
- When wiring in the PC, be sure that it is done correctly by checking the product's rated voltage and the terminal layout. Connecting a power supply that is different from the rating or incorrectly wiring the product could result in fire or failure.
- Tighten the terminal screws with specified torque. Loose terminal screws may cause a short circuit, fire, or malfunction. Tightening the terminal screws too far may cause damage to the screw and/or the module, resulting in short circuit, or malfunctions.
- Be sure that cuttings, wire chips, or other foreign matter do not enter the module. Foreign matter may start a fire or cause failure or malfunctions.
- Be sure to fix communication cables and power cables leading from the module by placing them in the duct or clamping them. Cables not placed in the duct or without clamping may hang or shift, allowing them to be accidentally pulled, which may result in a module malfunction and cable damage.
- When detaching the communication cable from the module, do not pull the cable portion. For cables with connectors, hold the connector at the junction to the module, then detach it. For cables without connectors, first loosen the screw at the junction, then detach the cable. Pulling the cable portion while it is connected to the module may cause a malfunction or damage to the module and cable.

[Starting and maintenance precautions]

⚠ CAUTION

- Do not touch the terminal while the power is on. It may cause malfunction.
- Make sure to switch all phases of the external power supply off before cleaning or re-tightening the terminal screws. If you do not switch off the external power supply, it will cause failure or malfunction of the module.
- Never disassemble or modify the module. This may cause failure, malfunctioning, injury and/or fire.
- Make sure to switch all phases of the external power supply off before mounting or removing the module. If you do not switch off the external power supply, it will cause failure or malfunction of the module.
- Do not install/remove the terminal block more than 50 times after the first use of the product. (IEC 61131-2 compliant)

[Disposal precaution]

⚠ CAUTION

- When disposing of this product, handle it as an industrial waste.

About the Manuals

The following product manuals are available. Please use this table as a reference to request the appropriate manual as necessary.

Detailed manual

Manual name	Manual No. (Model Code)
A1S64TCTT-S1 Temperature Control Module A1S64TCTTBW-S1 Temperature Control Module with Disconnection Detection Function User's Manual (Detailed edition)	IB-66747 (13J891)

Please read A1S64TCTT-S1 Temperature Control Module A1S64TCTTBW-S1 Temperature Control Module with Disconnection Detection Function User's Manual (Detailed edition) when using this unit.

1. General Description

This user's manual describes the specification, name of each part, wiring, etc. of the A1S64TCTT-S1 Temperature Control Module (Hereafter abbreviated as A1S64TCTT-S1) A1S64TCTTBW-S1 Temperature Control Module with Disconnection Detection Function (Hereafter abbreviated as A1S64TCTTBW-S1).

A1S64TCTT-S1 and A1S64TCTTBW-S1 abbreviated as A1S64TC.

After unpacking, confirm that there is the following products.

Item	A1S64TCTT-S1 Main body	A1S64TCTTBW-S1 Main body
A1S64TCTT-S1	1	-
A1S64TCTTBW-S1	-	1

2. Performance Specification

The A1S64TC performance specification is indicated in Table 2.1.

Table 2.1 A1S64TC performance specification

Item		Specification	
		A1S64TCTT-S1	A1S64TCTTBW-S1
Control output value		Transistor output	
Temperature input points		4-channel/module	
Supported thermocouple		Refer to Table 2.2	
Accuracy*1	Specification accuracy	Ambient temperature: 23°C ± 5°C	Full scale × (± 0.3%) ± 1 digit*2
		Ambient temperature: 0 to 55°C	Full scale × (± 0.7%) ± 1 digit*2
	Cold-junction compensation temperature accuracy (ambient temperature: 0 to 55°C)	Temperature measurement value: -100°C or higher	Within ± 1.0°C
		Temperature measurement value: -150 to -100°C	Within ± 2.0°C
	Temperature measurement value: -200 to -150°C	Within ± 3.0°C	
Sampling cycle		0.5s/4-channel	
Control output cycle		1 to 100 Ω	
Effects of the external resistance		0.35 μV/Ω	
Input impedance		1M Ω or more	
Input filter		1 to 100S (0: input filter off)	
Sensor compensation value setting		Software version A -5.00 to 5.00% Software version B or later -50.00 to 50.00%	
Operation when there is an input disconnection		Upscale processing	
Temperature control method		PID ON/OFF pulse or 2-position control	
PID constant range	PID constant setting	Auto-tuning setting is possible	
	Proportional region (P)	0.0 to 1000.0% (0.0: 2-position control)	
	Integral time (I)	1 to 3600s	
	Derivative time (D)	1 to 3600s (Set 0 for PI control)	
Set value range		Within the temperature range set with the thermocouple to be used.	
Blind sector setting range		0.1 to 10.0%	
Transistor output	Output signal	ON/OFF Pulse	
	Rated load voltage	10.2 to 30VDC	
	Maximum load current	0.1A/point 0.4A/common	
	Maximum inrush current	0.4A 10ms	
	Maximum voltage drop when ON	0.1VDC (TYP) 0.1A 2.5VDC (MAX) 0.1A	
	Response time	OFF → ON: Less than 2ms ON → OFF: Less than 2ms (resistor load)	
Insulation method		Between the thermocouple input and grounding: Transformer insulation Between the thermocouple input and channel: Transformer insulation	
Heater disconnection specification	Current sensor	-	URD manufactured current sensor*3 CTL-12-S36-8 (0.0 to 100.0A) CTL-6-P-H (0.00 to 20.00A) (Former model, CTL-6-P is also applicable.)
		Input method	Multiplexor method A/D conversion
	Alert delay count	3 to 255	

Table 2.1 A1S64TC performance specification (continued)

Item	Specification	
	A1S64TCTT-S1	A1S64TCTTBW-S1
I/O occupied points	32 points	
Connection terminal	20 points terminal block	
Supported cable size	0.75 to 1.5mm	
Supported solderless terminal	R1.25-3,1.25-YS3,RAV1.25-3,V1.25-YS3A	
Internal consumed current (mA)	330	420
Weight (kg) [lb]	0.27[0.59]	0.3[0.66]
External dimensions (mm) [inch]	130[5.12](H) × 34.5[1.36](w) × 93.6[3.69](D)	

For the noise resistance, dielectric withstand voltage, and insulation resistance for the PC system which uses this module, refer to the power module specification found in the CPU Module User's Manual.

*1: Calculate the accuracy as follows:

(Accuracy) = (specification accuracy) + (cold-junction temperature compensation accuracy)

Example: When measuring the temperature 300°C with the input range setting "38 (the thermocouple K, -200.0 to 400.0, in 0.1°C unit)" at ambient temperature of 35°C, the accuracy is: (400.0 - (-200.0)) [full scale] × (± 0.007) [± 0.7%] + (± 0.1°C) [± 1 digit] + (± 1.0°C) [cold-junction temperature compensation accuracy] = ± 5.3°C

*2: "± 1 digit" error depends on the input range.

For setting unit of 1°C, ± 1°C For setting unit of 0.1°C, ± 0.1°C

*3: Only the URD International, Ltd. current sensor can be used.

Sales channels for current sensors manufactures by URD International Ltd. are listed as follows:


U.S.A.	Julia Industries Inc. Tel:949-831-0111	KOREA	Joyang Trading Co. Tel:02-521-2294
BRAZIL	Ananda Industrial Ltda. Tel:011-5584-0959		Sewon Tech Co.,Ltd. Tel:02-868-9355/9356
UNITED KINGDOM	Omni Components Tel:024-7622-5757	HONG-KONG	Keum Ho Corporation Tel:51-319-4155/4156
GERMANY	Allied Electronics GmbH Tel:0221-497-3084		Weltronics Components Ltd. Tel:2410-0623
FRANCE	Diltronic S.A. Tel:01-34-51-33-00	TAIWAN	Tope Co.,Ltd. Tel:886-2-8228-0658
ITALY	ELNET s.n.c. Tel:041-50-19-939	INDIA	AmtechElectronics PVT.Ltd. Tel:02712-25324

Table 2.2 The types of supported thermocouples and the measured temperature range


Thermocouple	°C		°F		
	Measured temperature range	Data resolution	Measured temperature range	Data resolution	
R	0 to 1700	1	0 to 3000	1	
K	0 to 500	1	0 to 1000	1	
	0 to 800		0 to 2400		
	0 to 1300				
	-200.0 to 400.0 0.0 to 400.0 0.0 to 500.0 0.0 to 800.0		0.1		0.0 to 1000.0
J	0 to 500	1	0 to 1000	1	
	0 to 800		0 to 1600		
	0 to 1200		0 to 2100		
T	0.0 to 400.0 0.0 to 500.0 0.0 to 800.0	1	0.0 to 1000.0	0.1	
	-200 to 400 -200 to 200 0 to 200 0 to 400		0 to 700 -300 to 400		1
	-200.0 to 400.0 0.0 to 400.0		0.1		0.0 to 700.0
S	0 to 1700	1	0 to 3000	1	
B	0 to 1800	1	0 to 3000	1	
E	0 to 400 0 to 1000	1	0 to 1800	1	
	0.0 to 700.0		0.1		-
N	0 to 1300	1	0 to 2300	1	
U	0 to 400 -200 to 200	1	0 to 700 -300 to 400	1	
	0.0 to 600.0		0.1		-
L	0 to 400 0 to 900	1	0 to 800 0 to 1600	1	
	0.0 to 400.0 0.0 to 900.0		0.1		-
PL II	0 to 1200	1	0 to 2300	1	
W5Re/W26Re	0 to 2300	1	0 to 3000	1	

For the general specifications, refer to the User's Manual for the PC CPU used.


3. Name of Each Part

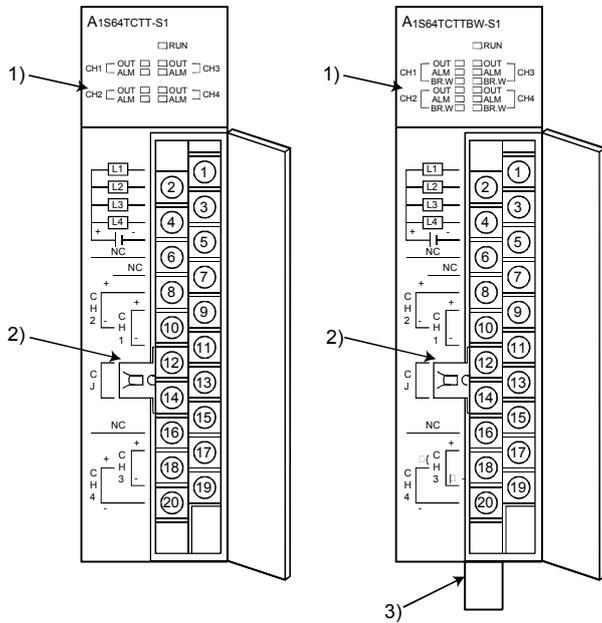

A1S64TCTT-S1 LED

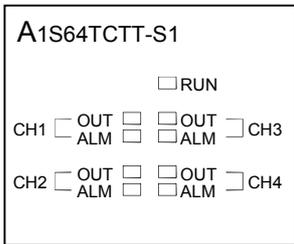

A1S64TCTTBW-S1 LED

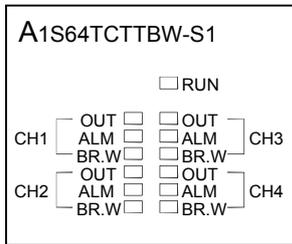

Number	Name	Description
1)	LED	<p>RUN A1S64TC operation status display ON: Normal operation Flashing (2 sec. ON, 2 sec. OFF) : When write data error occurs Flashing (1 sec. ON, 1 sec. OFF): Hardware error OFF: 5V power OFF</p>
	OUT	<p>Transistor output status display ON: Transistor output ON OFF: Transistor output OFF</p>
	ALM	<p>Alert alarm status display ON : The alert alarm is turned ON. LAB error occurred. Flashing: The measured temperature range is exceeded. The thermocouple is not connected. The thermocouple cable is not connected. OFF : The alert alarm is OFF.</p>
	BR.W	<p>Heater disconnection detection status display ON: The heater disconnection is detected. OFF: The heater disconnection has not been detected.</p>
2)	Cool contact temperature compensation resistor	Shipped pre-installed to the terminal block.
3)	Disconnection detection connector	<p>Connector to the current sensor</p>

4. Loading and Installation

Precautions when handling the A1S64TC and installation environment are explained.

For details of implementing and setting up this unit, please refer to the User's Manual for the PC CPU used.

4.1 Handling Instructions

- 1) The module case is made of plastic. Be sure not to drop it or subject it to strong vibration.
- 2) Do not remove the module printed circuit boards from the case. It may cause trouble.
- 3) When connecting the wiring, do not allow wire cuttings or other foreign matter to enter from the top of the module. Remove any foreign matter from the module.
- 4) Tighten the module installation screws within the following tightening torque range.

Screw position	Tightening torque range
Module installation screw (M4 screw)	78 to 118N•cm
Terminal block terminal screw (M3.5 screw)	59 to 88N•cm
Terminal block installation screw (M4 screw)	78 to 118N•cm
Wire breakage detection connector installation screw *(M2.6 screws)	15 to 30N•cm
Cable fixing screw *(M2 screws)	11 to 14N•cm

*: Use only for A1S64TCTTBW-S1.

4.2 Installations Environment

Never install the AnS series PC in the following environments:

- 1) Locations where the ambient temperature is outside the range of 0 to 55°C.
- 2) Locations where the ambient humidity is outside the range of 10 to 90%RH.
- 3) Locations where dew condensation takes place due to sudden temperature changes.
- 4) Locations where there are corrosive and/or combustible gasses.
- 5) Locations where there is a high level of conductive power (such as dust and iron filings, oil mist, salt, and organic solvents).
- 6) Locations exposed to the direct rays of the sun.
- 7) Locations where strong power and magnetic fields are generated.
- 8) Locations where vibration and shock are directly transmitted to the main module.

5. Wiring

The precaution when wiring and the module connection example are shown below.

5.1 Precaution when wiring


In order to have the best result from the A1S64TC functions and to make the system highly reliable, an external cabling with low noise effects are necessary.

The external wiring precautions are shown below:

- 1) Use separate cables for the alternating current and A1S64TC external input signals to avoid A/C surges and induction effects.
- 2) Do not bunch the cables with the main circuit, high-voltage cable or load cables from other than PC, or install them close to each other. Install the cables far apart from high-frequency circuits, such as the high-voltage cable and inverter load main circuit, as much as possible. This increases the noises, surges, and induction.
- 3) Perform a one-point grounding for the shielded line and shields of the seal and cable at the PC. However, there may be cases when grounding should be performed externally depending on the noise condition.


5.2 Module wiring example

1) A1S64TCTT-S1

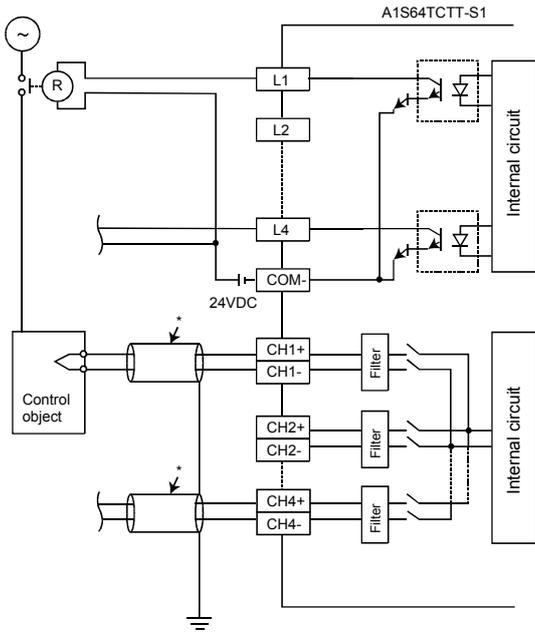

*: Always use the shielded compensating conductor for the cable.


2) A1S64TCTTBW-S1

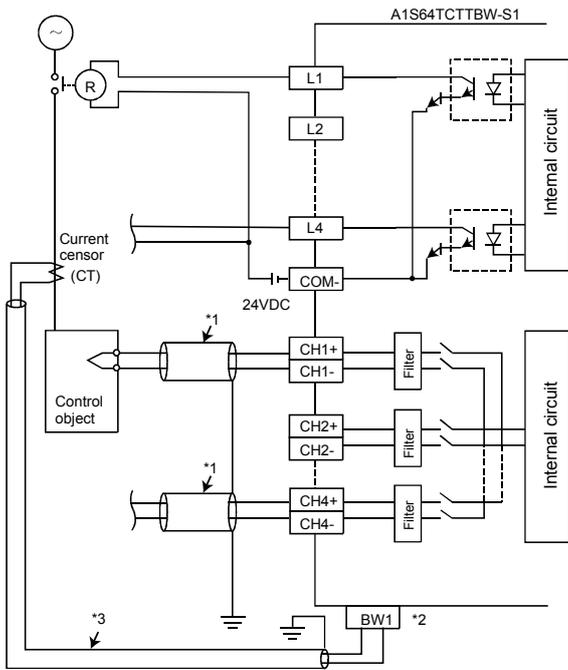

*1: Always use the shielded compensating conductor for the cable.


*2: Refer to the following for the connection of the disconnection detector connector.

*3: Please use the cable with shield.

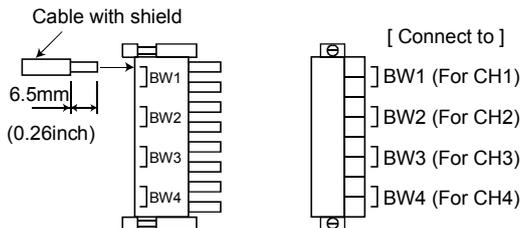


6. External Dimensions

1) A1S64TCTT-S1

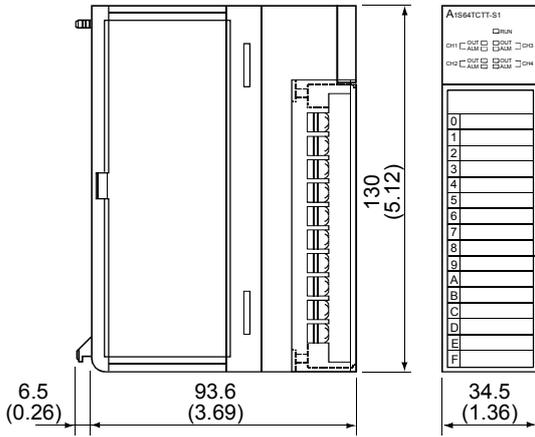

2) A1S64TCTTBW-S1

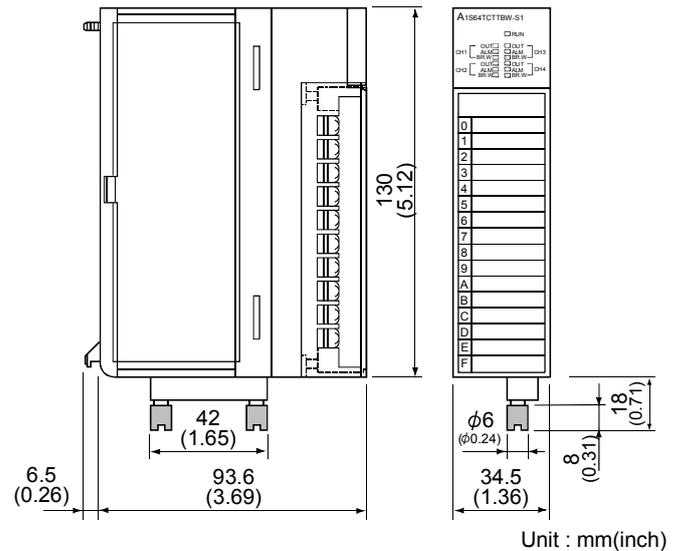

Unit : mm(inch)

Warranty

Mitsubishi will not be held liable for damage caused by factors found not to be the cause of Mitsubishi; machine damage or lost profits caused by faults in the Mitsubishi products; damage, secondary damage, accident compensation caused by special factors unpredictable by Mitsubishi; damages to products other than Mitsubishi products; and to other duties.

For safe use

- This product has been manufactured as a general-purpose part for general industries, and has not been designed or manufactured to be incorporated in a device or system used in purposes related to human life.
- Before using the product for special purposes such as nuclear power, electric power, aerospace, medicine or passenger movement vehicles, consult with Mitsubishi.
- This product has been manufactured under strict quality control. However, when installing the product where major accidents or losses could occur if the product fails, install appropriate backup or failsafe functions in the system.

Country/Region	Sales office/Tel	Country/Region	Sales office/Tel
U.S.A	Mitsubishi Electric Automation Inc. 500 Corporate Woods Parkway Vernon Hills, IL 60061, U.S.A. Tel : +1-847-478-2100	Hong Kong	Mitsubishi Electric Automation (Hong Kong) Ltd. 10th Floor, Manulife Tower, 169 Electric Road, North Point, Hong Kong Tel : +852-2887-8870
Brazil	MELCO-TEC Rep. Com.e Assessoria Tecnica Ltda. Rua Correia Dias, 184, Edificio Paraiso Trade Center-8 andar Paraiso, Sao Paulo, SP Brazil Tel : +55-11-5908-8331	China	Mitsubishi Electric Automation (Shanghai) Ltd. 4/F Zhi Fu Plaza, No.80 Xin Chang Road, Shanghai 200003, China Tel : +86-21-6120-0808
Germany	Mitsubishi Electric Europe B.V. German Branch Gothaer Strasse 8 D-40880 Ratingen, GERMANY Tel : +49-2102-486-0	Taiwan	Setsuyo Enterprise Co., Ltd. 6F No.105 Wu-Kung 3rd.Rd, Wu-Ku Hsiang, Taipei Hsine, Taiwan Tel : +886-2-2299-2499
U.K	Mitsubishi Electric Europe B.V. UK Branch Travellers Lane, Hatfield, Hertfordshire., AL10 8XB, U.K. Tel : +44-1707-276100	Korea	Mitsubishi Electric Automation Korea Co., Ltd. 1480-6, Gayang-dong, Gangseo-ku Seoul 157-200, Korea Tel : +82-2-3660-9552
Italy	Mitsubishi Electric Europe B.V. Italian Branch Centro Dir. Colleoni, Pal. Perseo-Ingr.2 Via Paracelso 12, I-20041 Agrate Brianza., Milano, Italy Tel : +39-039-60531	Singapore	Mitsubishi Electric Asia Pte. Ltd. 307 Alexandra Road #05-01/02, Mitsubishi Electric Building, Singapore 159943 Tel : +65-6470-2460
Spain	Mitsubishi Electric Europe B.V. Spanish Branch Carretera de Rubi 76-80, E-08190 Sant Cugat del Valles, Barcelona, Spain Tel : +34-93-565-3131	Thailand	Mitsubishi Electric Automation (Thailand) Co., Ltd. Bang-Chan Industrial Estate No.111 Moo 4, Serithai Rd, T.Kannayao, A.Kannayao, Bangkok 10230 Thailand Tel : +66-2-517-1326
France	Mitsubishi Electric Europe B.V. French Branch 25, Boulevard des Bouvets, F-92741 Nanterre Cedex, France TEL : +33-1-5568-5568	Indonesia	P.T. Autolekknindo Sumber Makmur Muara Karang Selatan, Block A/Ultra No.1 Kav. No.11 Kawasan Industri Pergudangan Jakarta - Utara 14440, P.O.Box 5045 Jakarta, 11050 Indonesia Tel : +62-21-6630833
South Africa	Circuit Breaker Industries Ltd. Private Bag 2016, ZA-1600 Isando, South Africa Tel : +27-11-928-2000	India	Messung Systems Pvt. Ltd. Electronic Sadan NO.III Unit No15, M.I.D.C Bhosari, Pune-411026, India Tel : +91-20-2712-3130
		Australia	Mitsubishi Electric Australia Pty. Ltd. 348 Victoria Road, Rydalmere, N.S.W 2116, Australia Tel : +61-2-9684-7777

MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE: TOKYO BUILDING, 2-7-3 MARUNOUCHI, CHYODOKU, TOKYO 100-8310, JAPAN
NAGOYA WORKS: 1-14, YADA-MINAMI 5-CHOME, HIGASHI-KU, NAGOYA, JAPAN

When exported from Japan, this manual does not require application to the Ministry of Economy, Trade and Industry for service transaction permission.

Specifications subject to change without notice.
Printed in Japan on recycled paper.